




REDFERN

OUTSIDE ACCESSORY KIT

INSTALLATION INSTRUCTIONS

MROAK

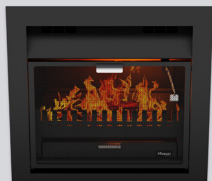

REDFERN 700



REDFERN 800



REDFERN 900




Glen Dimplex Australia supports the Australian wood heating industry through its membership of the AHHA.

VERSION 1.0

CONTENTS OF BOX

- Grill bracket left
- Grill bracket right
- Stainless steel grill **x2**
- Grill rack
- BBQ tool kit
- Weather cover
- M6 coach bolt **x4**
- M6 washer **x4**
- M6 nut **x4**

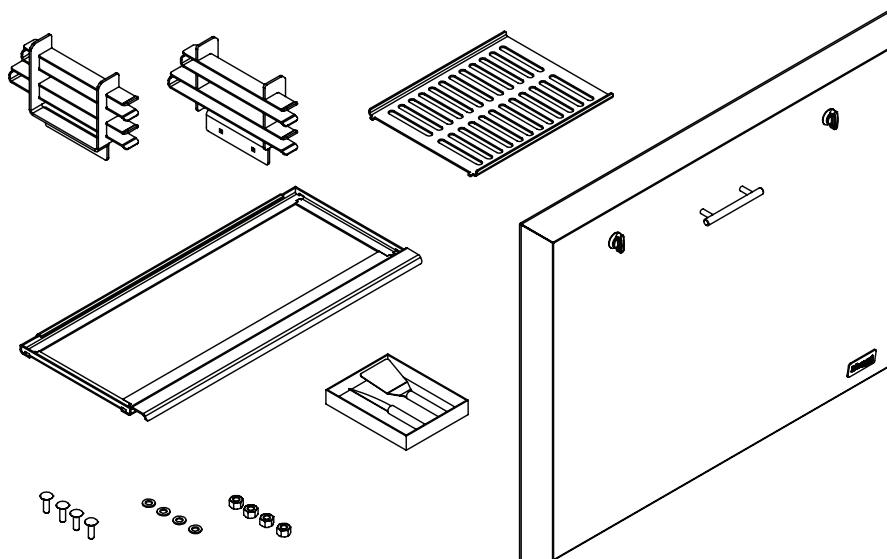


TOOLS REQUIRED

- 10mm spanner **or** socket wrench with 10mm socket

INTRODUCTION

Masport Redfern Outdoor Accessory kit includes cooking grills, BBQ grill toolset and weather shield.

Masport Redfern Outdoor Accessory Kit is easy to install and can be done at home with basic tools. Before starting installation, ensure you have read this manual from start to finish.

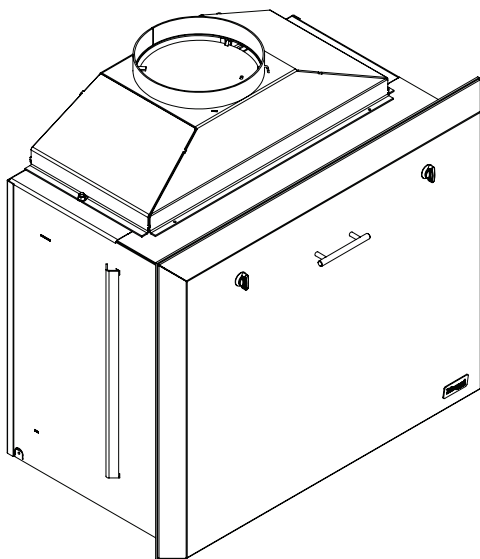

USAGE TIPS


The Masport Redfern Outdoor Accessory Kit is designed in Australia and made from high quality materials, and with proper use and care should last a considerable amount of time. To ensure the best possible experience with Outdoor Accessory Kit, please follow the below usage tips:

The Outdoor Accessory Kit has some components made from hardwearing stainless steel. Stainless steel will change colour when exposed to high temperatures and develop a gold and blue patina. This is normal and does not affect the performance.

When cooking on your Masport Redfern, we recommend waiting until your wood has burned down to a bed of red hot glowing coals for optimum cooking performance. Before the first use, clean grills with warm soapy water.


Ensure fireplace is completely extinguished and cold before fitting weather cover.

INSTALLATION INSTRUCTIONS FOR GRILL KIT

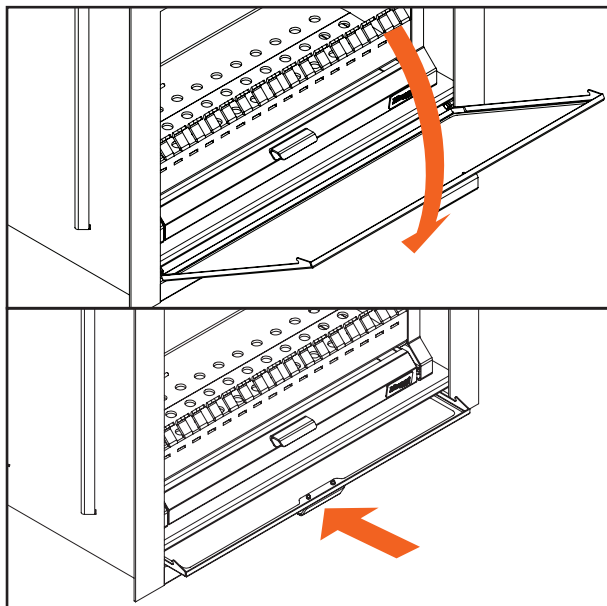


STEP 1

Slide safety screen under the firebox bottom as shown.

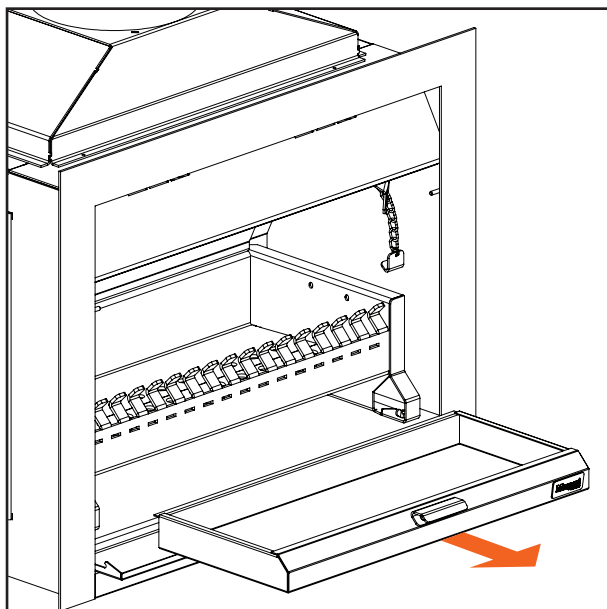


STEP 2


Remove ash pan from heater.

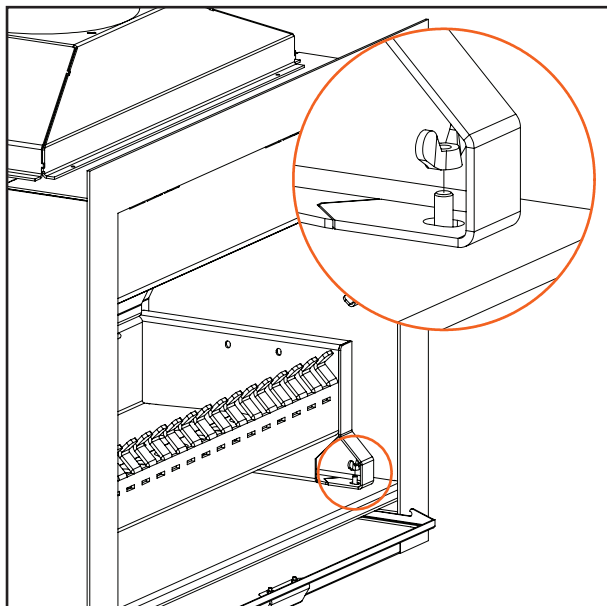**STEP 3**

Remove **2x** wing nut from both sides to uninstall fire basket.

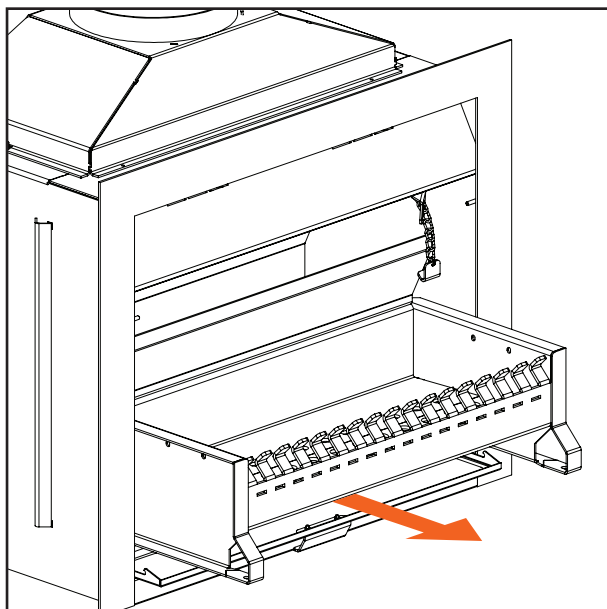
**STEP 4**

Remove fire basket from the heater.

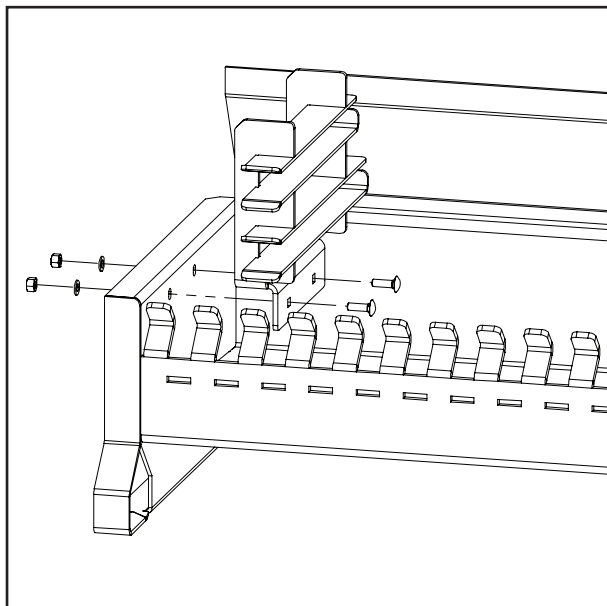


STEP 5

Install grill bracket left on left side of fire basket with **2x** coach bolt. Affix with **2x** hex nut and **2x** washer. Tighten with socket wrench or spanner.

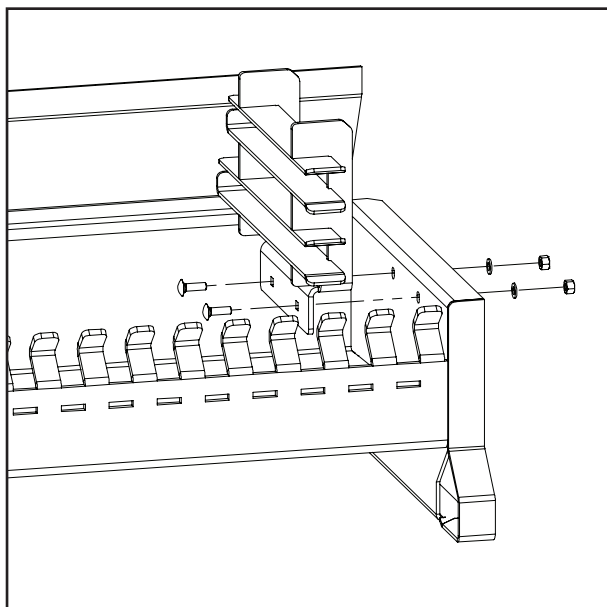


STEP 6


Install grill bracket right on right side of fire basket with **2x** coach bolt. Affix with **2x** hex nut and **2x** washer. Tighten with socket wrench or spanner.

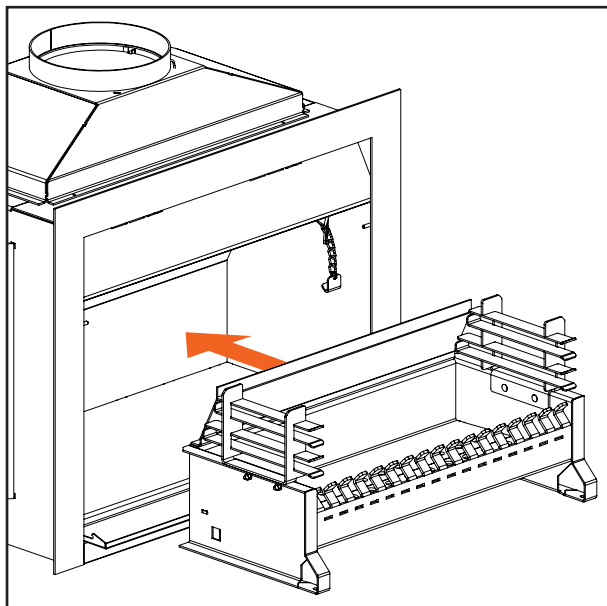**STEP 7**

Slide fire basket inside the heater and place it into position.

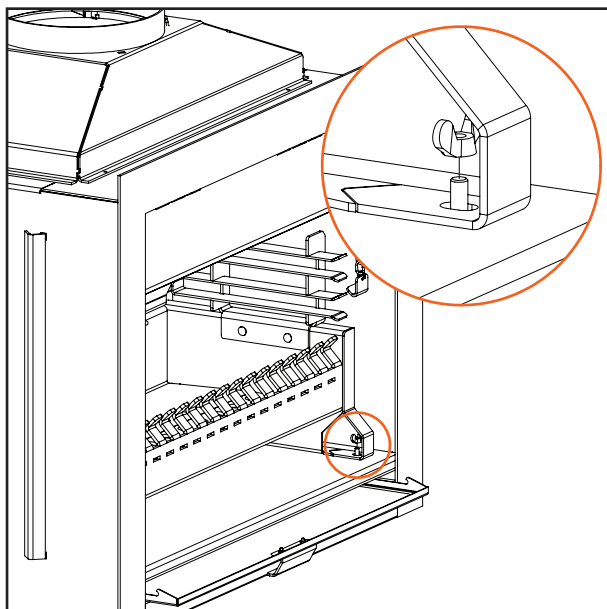
**STEP 8**

Affix fire basket with **2x** wing nut.

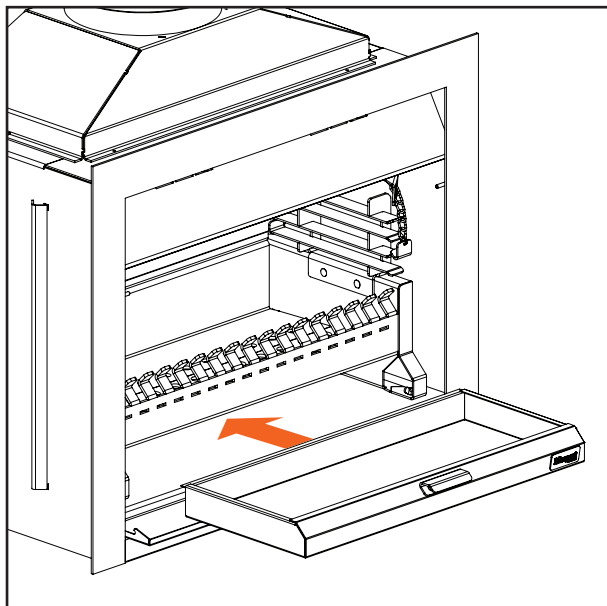


STEP 9

Slide ash pan into the heater and place it into position.

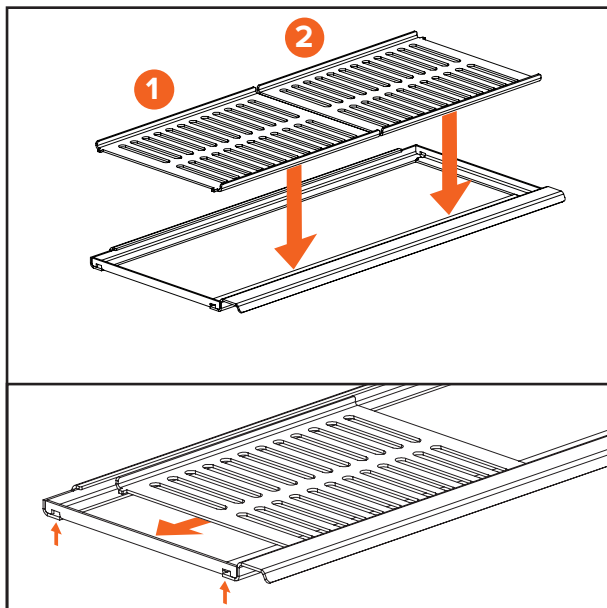


STEP 10

Place **2x** stainless hot plate onto grill rack and slide to secure grill tabs into rack slots.

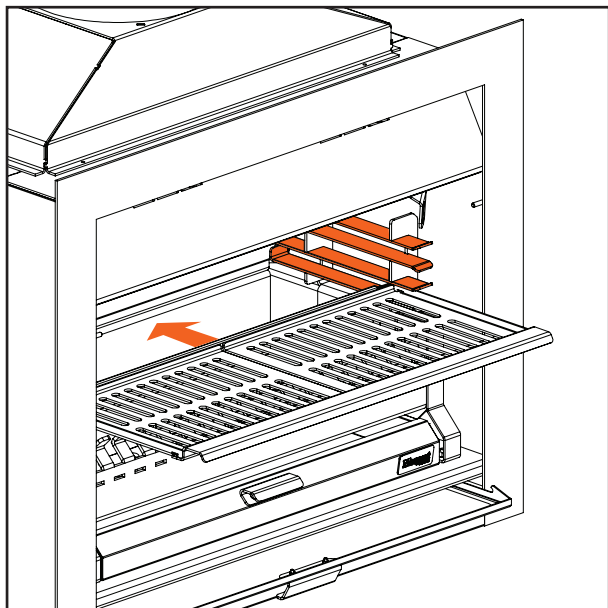**STEP 10**


Slide grill rack onto grill brackets to cook.
There are two height options for cooking.

INSTALLATION INSTRUCTIONS FOR WEATHER COVER

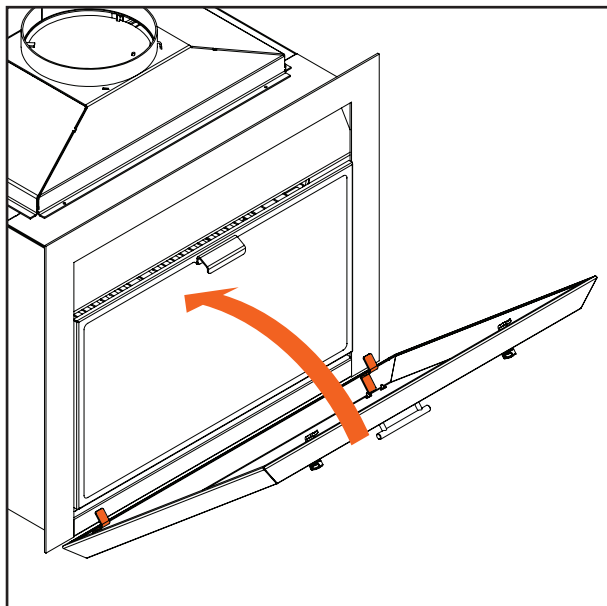

STEP 1

Install weather cover by hooking weather cover brackets between gap of safety screen and firebox base plate.

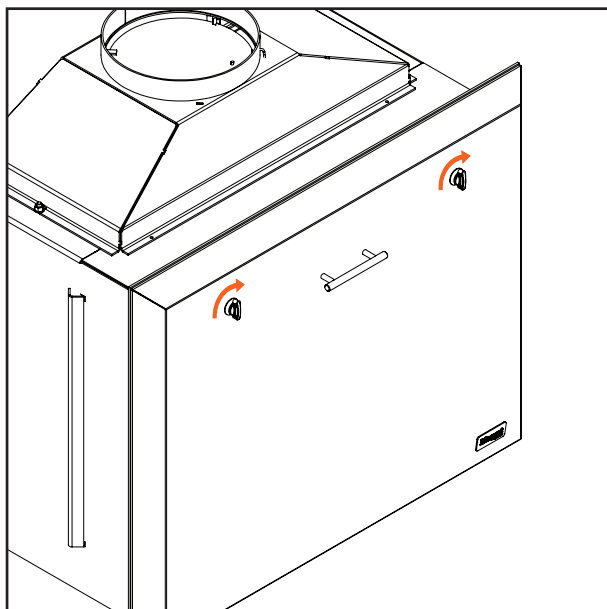

STEP 2

Lock weather cover in position by rotating locks in clockwise direction.

Ensure fireplace is completely extinguished and cold before fitting weather cover.



Glen Dimplex Australia Pty Ltd

8 Lakeview Drive,
Scoresby Victoria 3179
Australia

T: 1300 554 155

General and Sales Enquiries: flame.care@glendimplex.com.au

Technical Service: flame.support@glendimplex.com.au

www.glendimplex.com.au